




**DEUTSCHE
HYDRAPRO**
SUPERIOR BRAKING POWER

WIRING DIAGRAM

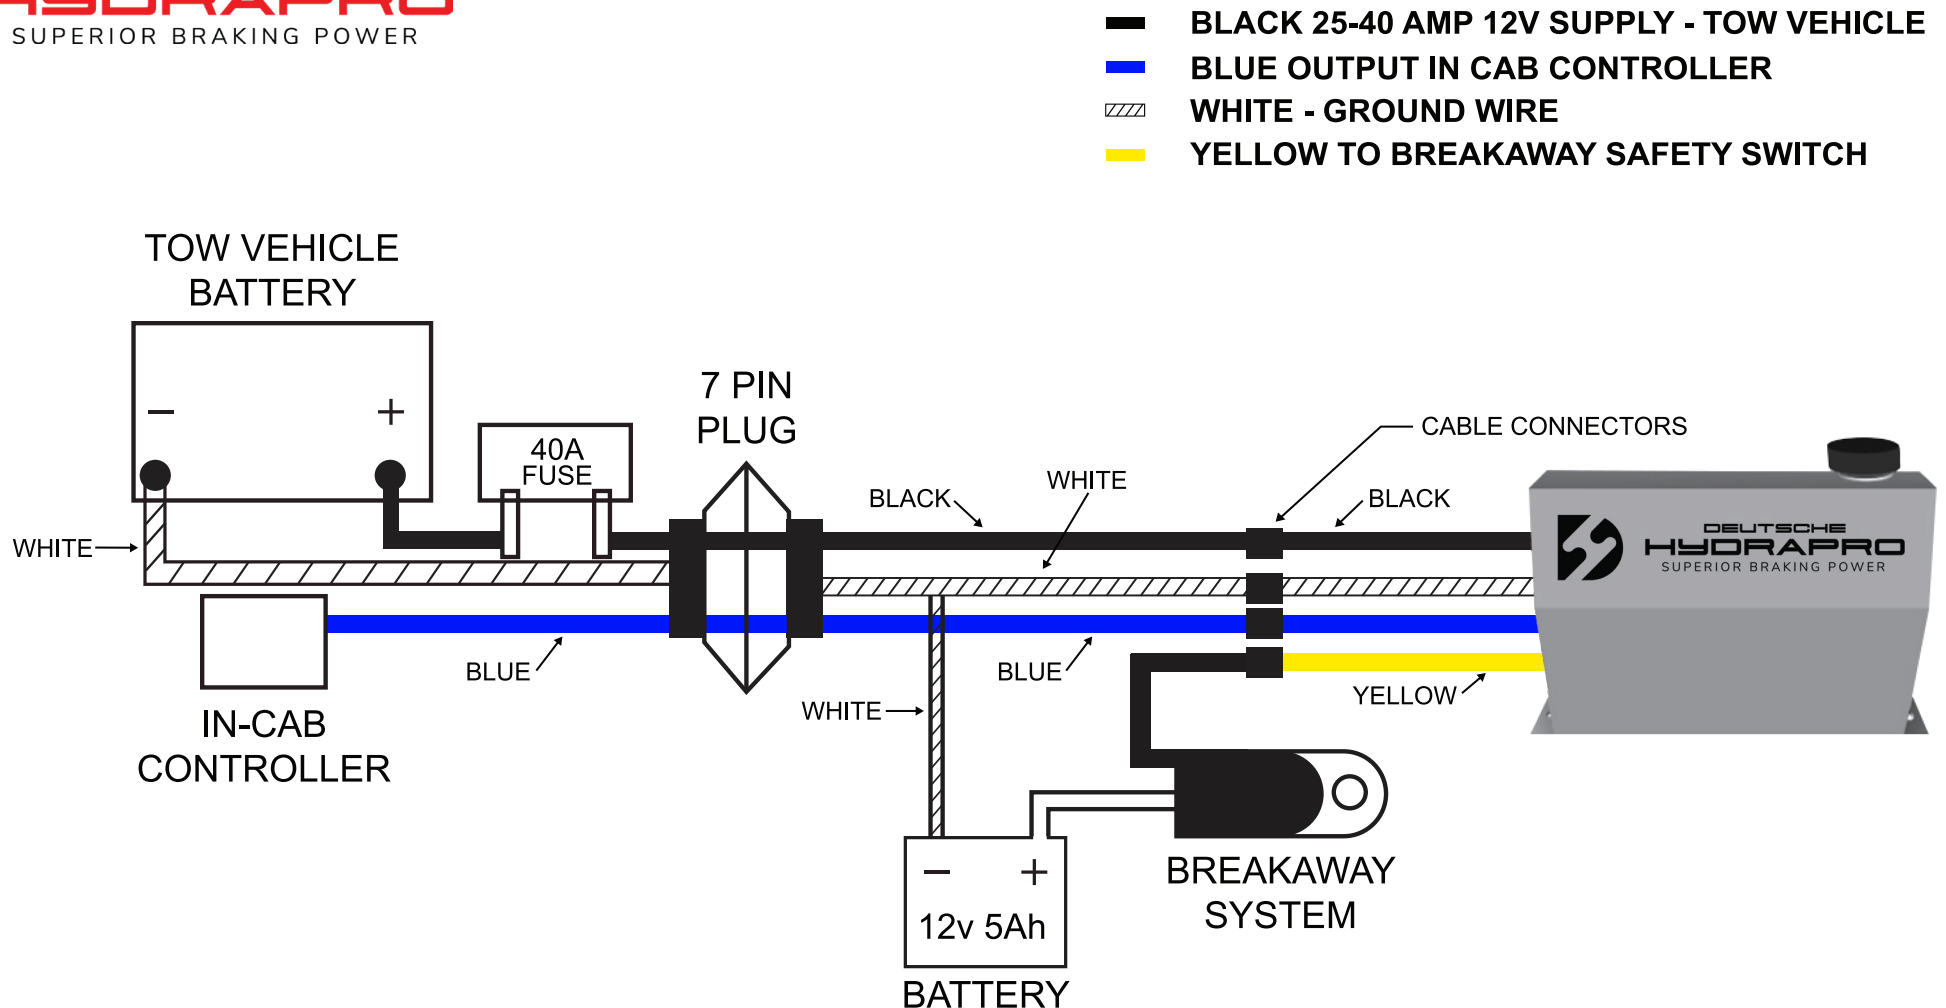

Please note:

- 40A fuse recommended in the tow vehicle.
- This wiring diagram is specific to the most common breakaway kits. However, there may be different breakaway kits, which use other wiring configurations and color codes. Therefore, you will need to check the specific manufacturer's specifications.
- To provide the best braking experience and not void the warranty, your tow vehicle must have a factory or after-market brake controller set to EOH (Electric-Over-Hydraulic). Please confirm with your tow vehicle manufacturer that your factory controller can support EOH (Electric-Over-Hydraulic) towing, especially if it is a 2016 model or older. Failure to do so can damage the unit and cause unreliable braking.